




# PHANTOM HYDRO SMART WATER ROWING MACHINE SF-RW5910 SMART USER MANUAL



**IMPORTANT!** Please retain owner's manual for maintenance and adjustment instructions. Your satisfaction is very important to us, **PLEASE DO NOT RETURN UNTIL YOU HAVE CONTACTED US:** [support@sunnyhealthfitness.com](mailto:support@sunnyhealthfitness.com) or 1-877-90SUNNY (877-907-8669).

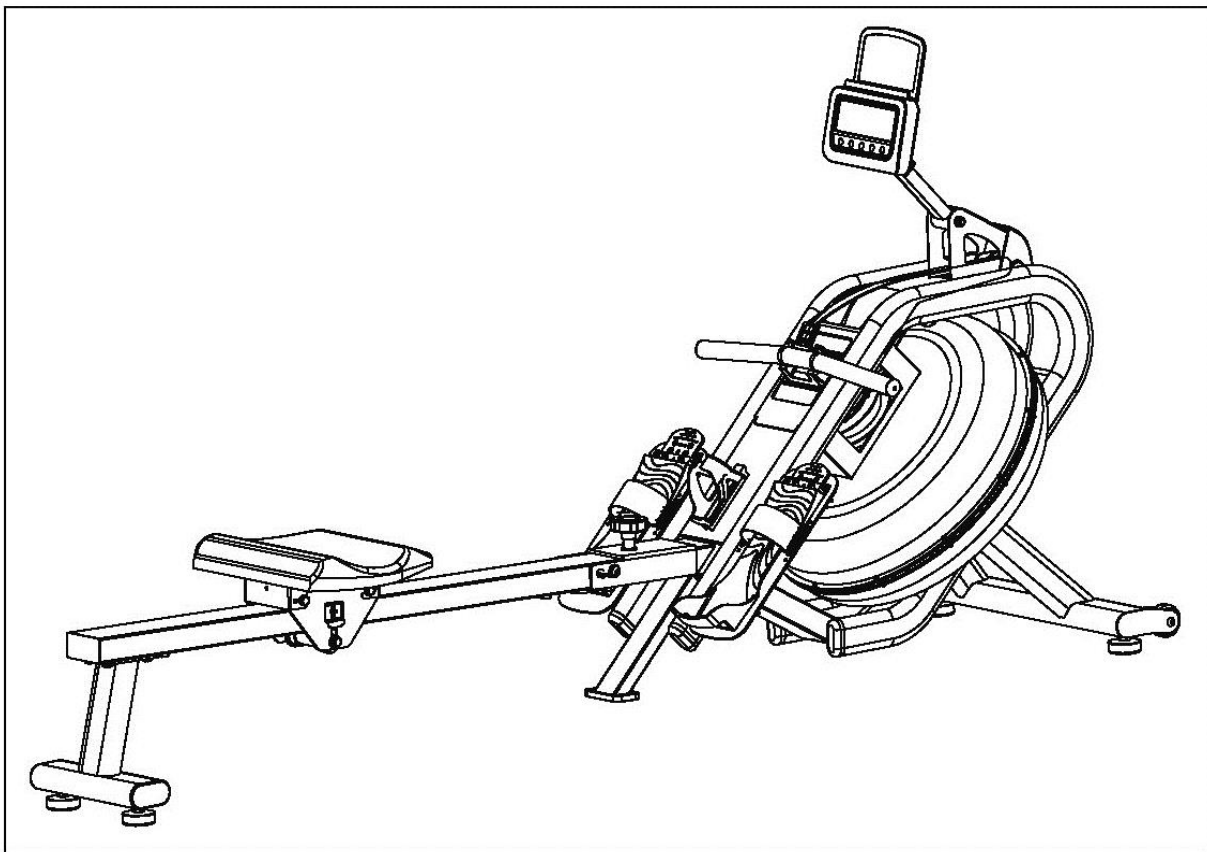

[WWW.SUNNYHEALTHFITNESS.COM](http://WWW.SUNNYHEALTHFITNESS.COM)


# **IMPORTANT SAFETY INFORMATION**

We thank you for choosing our product. To ensure your safety and health, please use this equipment correctly. It is important to read this entire manual before assembling and using the equipment. Safe and effective use can only be achieved if the equipment is assembled, maintain and used properly. It is your responsibility to ensure that all users of the equipment are informed of all warnings and precautions.

1. Before starting any exercise program, you should consult your physician to determine if you have any medical or physical conditions that could put your health and safety at risk or prevent you from using the equipment properly. Your physician's advice is essential if you are taking medication that affects your heart rate, blood pressure or cholesterol level.
2. Be aware of your body's signals. Incorrect or excessive exercise can damage your health. Stop exercising if you experience any of the following symptoms: pain, tightness in your chest, irregular heartbeat, shortness of breath, lightheadedness, dizziness or feelings of nausea. If you do experience any of these conditions, you should consult your physician before continuing with your exercise program.
3. Keep children and pets away from the equipment. The equipment is designed for adult use only.
4. Use the equipment on a solid, flat level surface with a protective cover for your floor or carpet. To ensure safety, the equipment should have at least 2 feet (60 cm) of free space all around it.
5. Ensure that all nuts and bolts are securely tightened before using the equipment. The safety of the equipment can only be maintained if it is regularly examined for damage and/or wear and tear.
6. Always use the equipment as indicated. If you find any defective components while assembling or checking the equipment, or if you hear any unusual noises coming from the equipment during exercise, discontinue use of the equipment immediately and do not use until the problem has been rectified.
7. Wear suitable clothing while using the equipment. Avoid wearing loose clothing that may become entangled in the equipment.
8. Do not place fingers or objects into the moving parts of the equipment.
9. The maximum weight capacity of this unit is 300 lbs (135 kgs).
10. The equipment is not suitable for therapeutic use.
11. To avoid bodily injury and/or damage to the product or property, proper lifting and moving is required.
12. Your product is intended for use in cool and dry conditions. You should avoid storage in extreme cold, hot or damp areas as this may lead to corrosion and other related problems.
13. This equipment is designed for indoor and home use only. It is not intended for commercial use.

# PRE-ASSEMBLY CHECK LIST


Before you start to assemble, please make sure all parts are included.

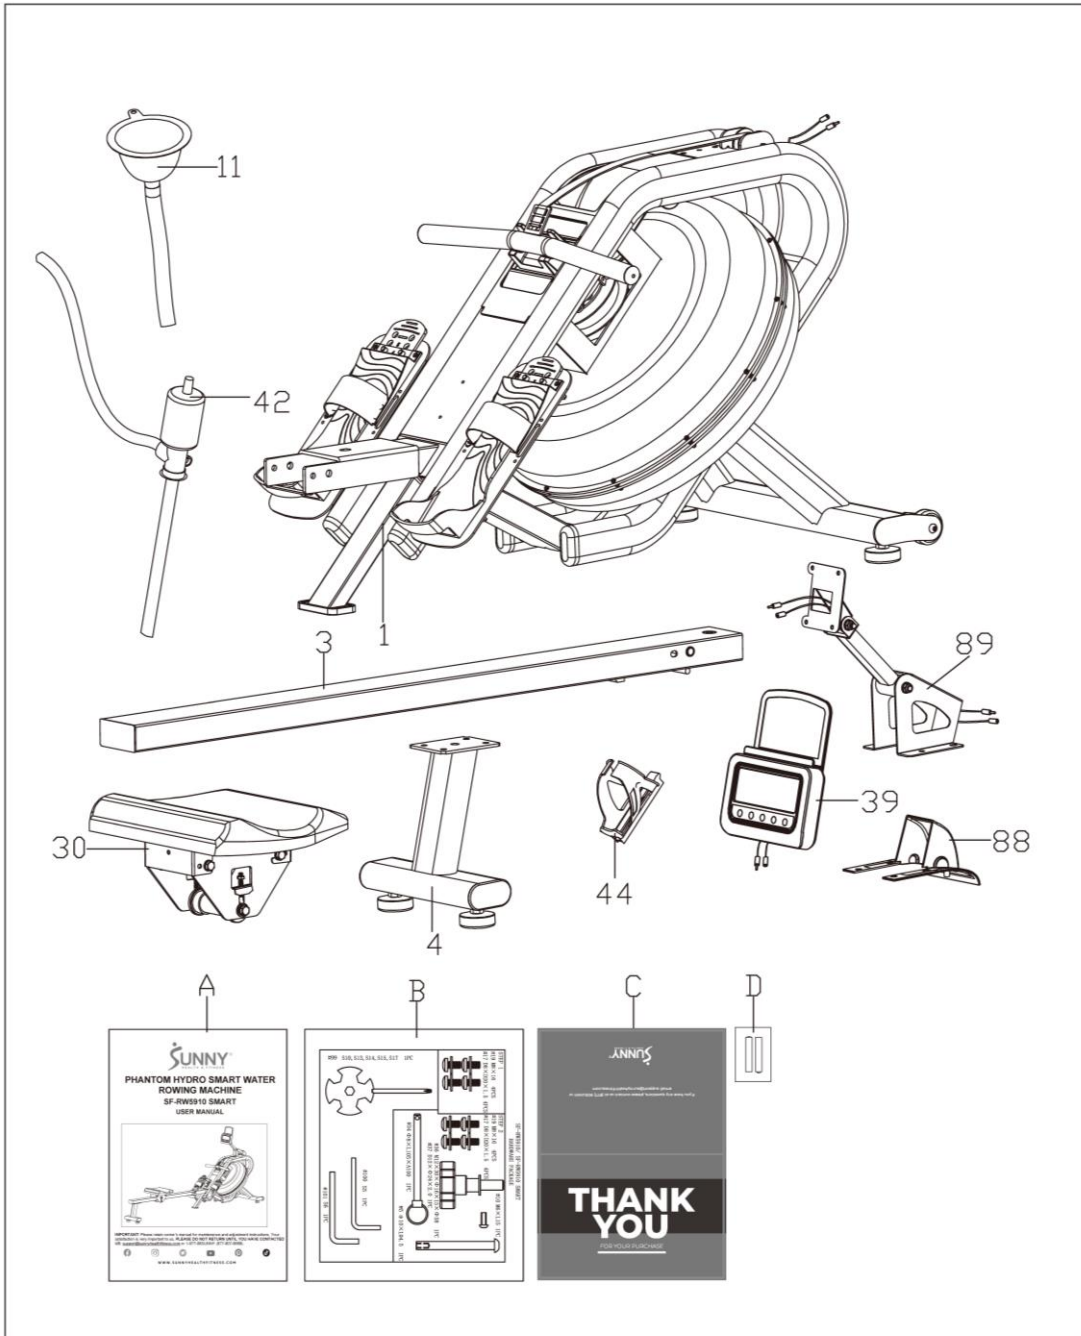

No.	Description	Spec.	Qty.
1	Main Frame		1
3	Slide Rail		1
4	Rear Support Tube		1
11	Funnel		1
30	Seat		1
39	Meter	HT109	1
42	Pumping Siphon		1

No.	Description	Spec.	Qty.
44	Bottle Holder		1
88	Protective Cover		1
89	Fixed Plate		1
A	Manual		1
B	Hardware Package		1
C	Thank You Card		1
D	Battery	AA	2

# HARDWARE PACKAGE

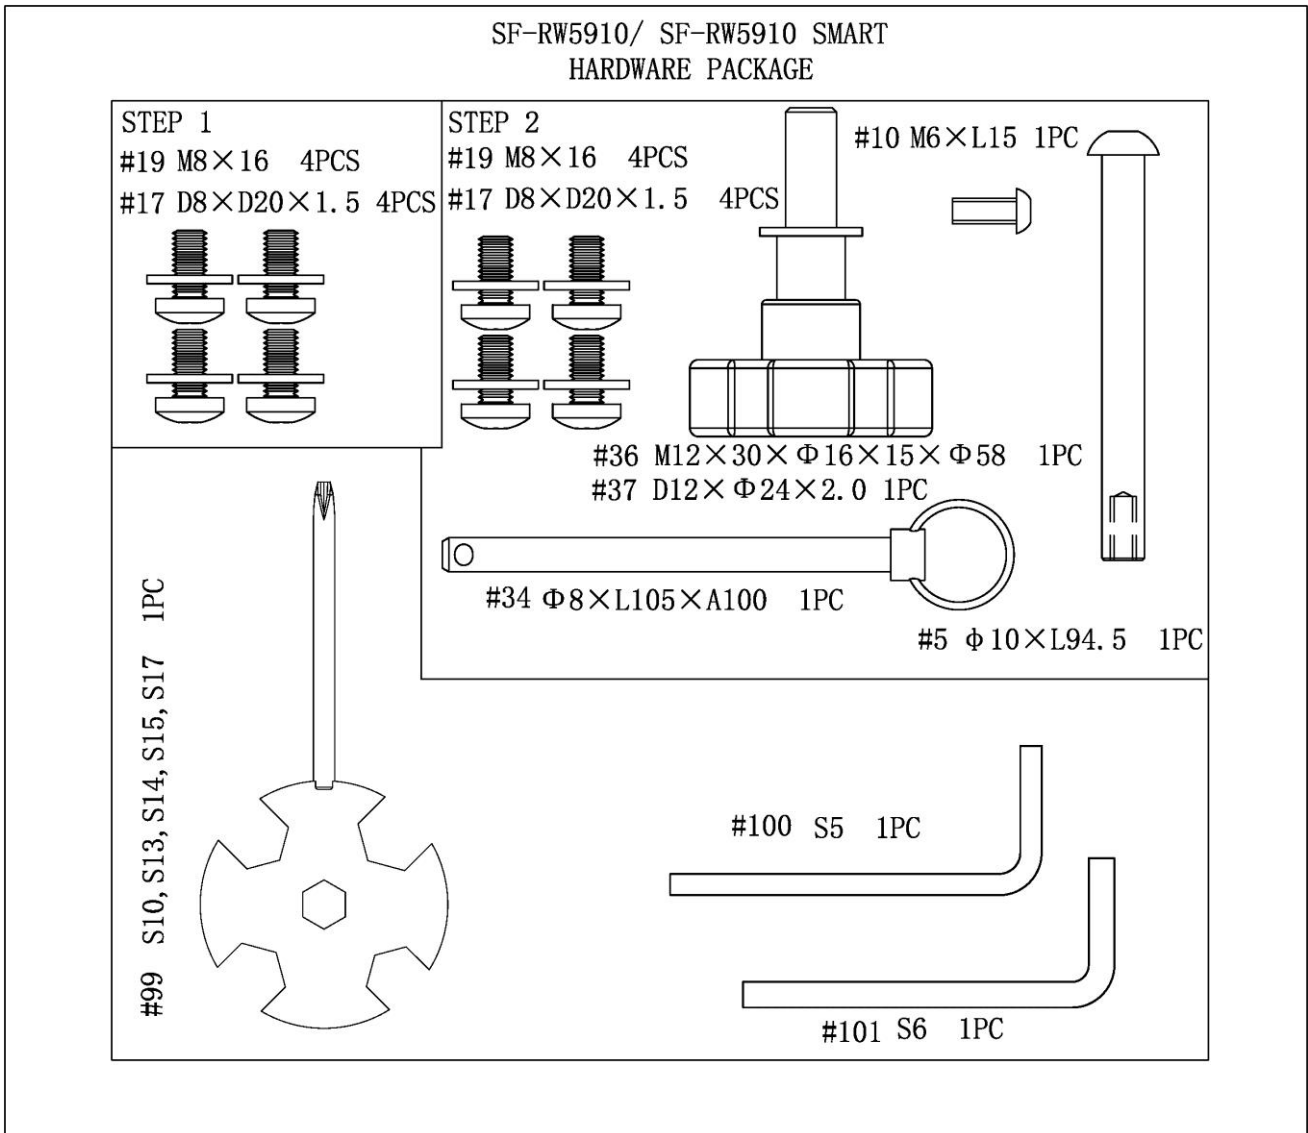

**Ordering Replacement Parts (U.S. and Canadian Customers only)**

Please provide the following information in order for us to accurately identify the part(s) needed:

- ✓ The model number (found on cover of manual)
- ✓ The product name (found on cover of manual)
- ✓ The part number found on the “EXPLODED DIAGRAM” (pages 15~16) and “PARTS LIST” (pages 17~18)

Please contact us at [support@sunnyhealthfitness.com](mailto:support@sunnyhealthfitness.com) or 1-877-90SUNNY (877-907-8669).

# ASSEMBLY INSTRUCTIONS


We value your experience using Sunny Health and Fitness products. For assistance with parts or troubleshooting, please contact us at [support@sunnyhealthfitness.com](mailto:support@sunnyhealthfitness.com) or 1-877-90SUNNY (877-907-8669).

## STEP 1:

Remove the pre-assembled **Limit Cushion (No. 12)** and 2 **Screws (No. 13)** from the **Slide Rail (No. 3)** using **Spanner (No. 99)**.

Slide the **Seat (No. 30)** on to the **Slide Rail (No. 3)**, make sure **Seat (No. 30)** is through the position of the **Limit Cushion (No. 12)**. Then attach the **Limit Cushion (No. 12)** to the **Slide Rail (No. 3)** with 2 **Screws (No. 13)** that were just removed. Tighten and secure with **Spanner (No. 99)**.

Attach the **Rear Support Tube (No. 4)** to the **Slide Rail (No. 3)** with 4 **Screws (No. 19)** and 4 **Flat Washers (No. 17)**. Tighten and secure with **Allen Wrench (No. 100)**.

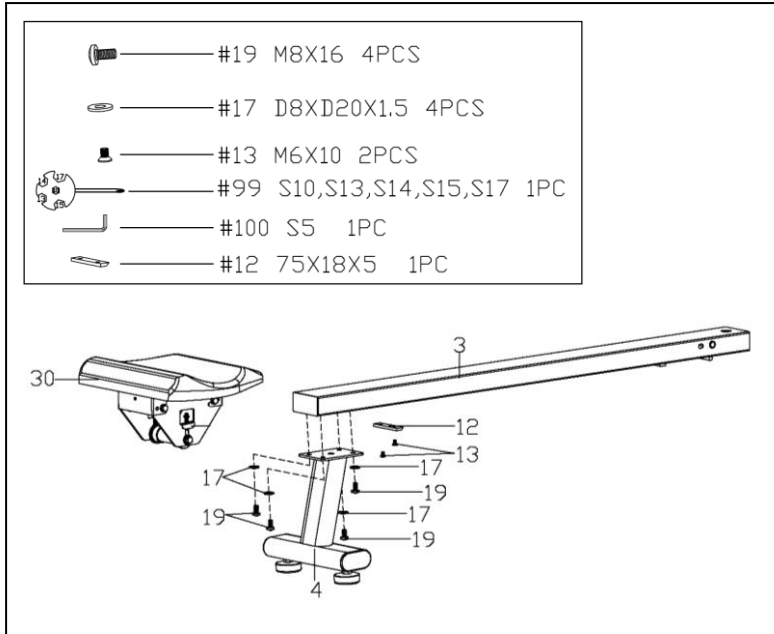

We value your experience using Sunny Health and Fitness products. For assistance with parts or troubleshooting, please contact us at [support@sunnyhealthfitness.com](mailto:support@sunnyhealthfitness.com) or 1-877-90SUNNY (877-907-8669).

## STEP 2:

Attach the **Slide Rail (No. 3)** to the **Main Frame (No. 1)** with **Bolt (No. 5)** and **Bolt (No. 10)** by using **Allen Wrenches (No. 101 & No. 100)**. Then tighten with **Knob (No. 36)** and **Flat Washer (No. 37)**, and finally insert **Pull Pin (No. 34)**.










Connect **Sensor Wire A (No. 40a)** with **Extension Wire A (No. 29a)** and connect **Sensor Wire B (No. 40b)** with **Extension Wire B (No. 29b)**.

After connecting the **Sensor Wires A & B (No. 40a & No. 40b)** with **Extension Wires A & B (No. 29a & No. 29b)**. The wires will be exposed. (Fig. A)

Move all wires to the side of plate A. (Fig. B)

Attach the **Protective Cover (No. 88)** and **Fixed Plate (No. 89)** to the **Main Frame (No. 1)** with 4 **Screws (No. 19)** and 4 **Flat Washers (No. 17)**. Tighten and secure with **Allen Wrench (No. 100)**.

**NOTE:** Be careful not cut any wires when attaching the **Protective Cover (No. 88)** and **Fixed Plate (No. 89)** to the **Main Frame (No. 1)**.

-  #19 M8X16 4PCS
-  #17 D8XD20X1.5 4PCS
-  #5 Ø10XL94.5 1PC
-  #10 M6XL15 1PC
-  #37 D12XØ24X2.0 1PC
-  #34 Ø8XL105XA100 1PC
-  #101 S6 1PC
-  #100 S5 1PC
-  #36 M12X30XØ16X15XØ58 1PC

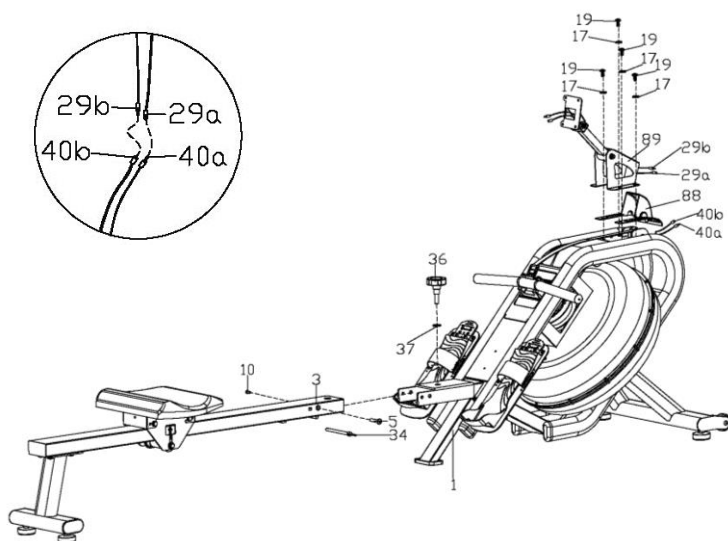


Fig. A


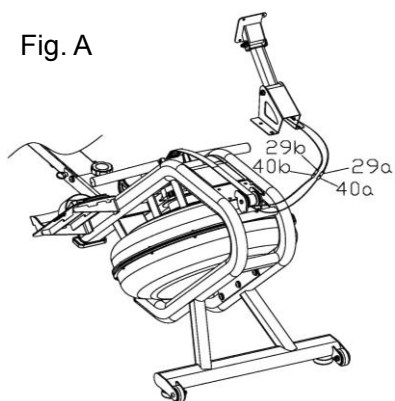


Fig. B

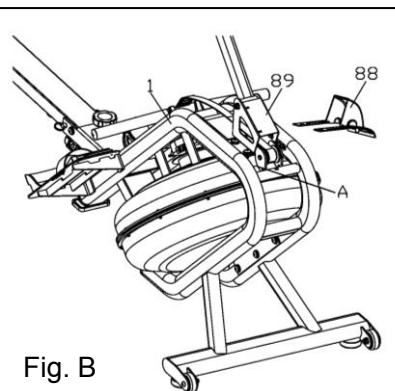

We value your experience using Sunny Health and Fitness products. For assistance with parts or troubleshooting, please contact us at [support@sunnyhealthfitness.com](mailto:support@sunnyhealthfitness.com) or 1-877-90SUNNY (877-907-8669).

### STEP 3:

Remove the pre-assembled 2 **Screws (No. 43)** from the **Main Frame (No. 1)** using **Spanner (No. 99)**. Attach the **Bottle Holder (No. 44)** to the **Main Frame (No. 1)** with 2 **Screws (No. 43)** that were just removed. Tighten and secure with **Spanner (No. 99)**.


Remove the pre-assembled 4 **Screws (No. 41)** from the back of **Tablet Holder (No. 45)** using **Spanner (No. 99)**.

Connect **Extension Wire A (No. 29a)** with **Meter Wire A (No. 39a)** and connect **Extension Wire B (No. 29b)** with **Meter Wire B (No. 39b)**. Then attach the **Meter (No. 39)** and the **Tablet Holder (No. 45)** to the **Meter Plate (No. 7)** with 4 **Screws (No. 41)** that were just removed. Tighten and secure with **Spanner (No. 99)**.

**NOTE:** Put all wires into the **Meter Support Tube (No. 2)** before attaching the **Meter (No. 39)** and the **Tablet Holder (No. 45)** to **Main Frame (No. 1)**.


If there are wires exposed from the bottom hole "A" of the **Meter Support Tube (No. 2)**. Push all wires up into the **Meter Support Tube (No. 2)**. (Fig. A)

*The assembly is complete!*

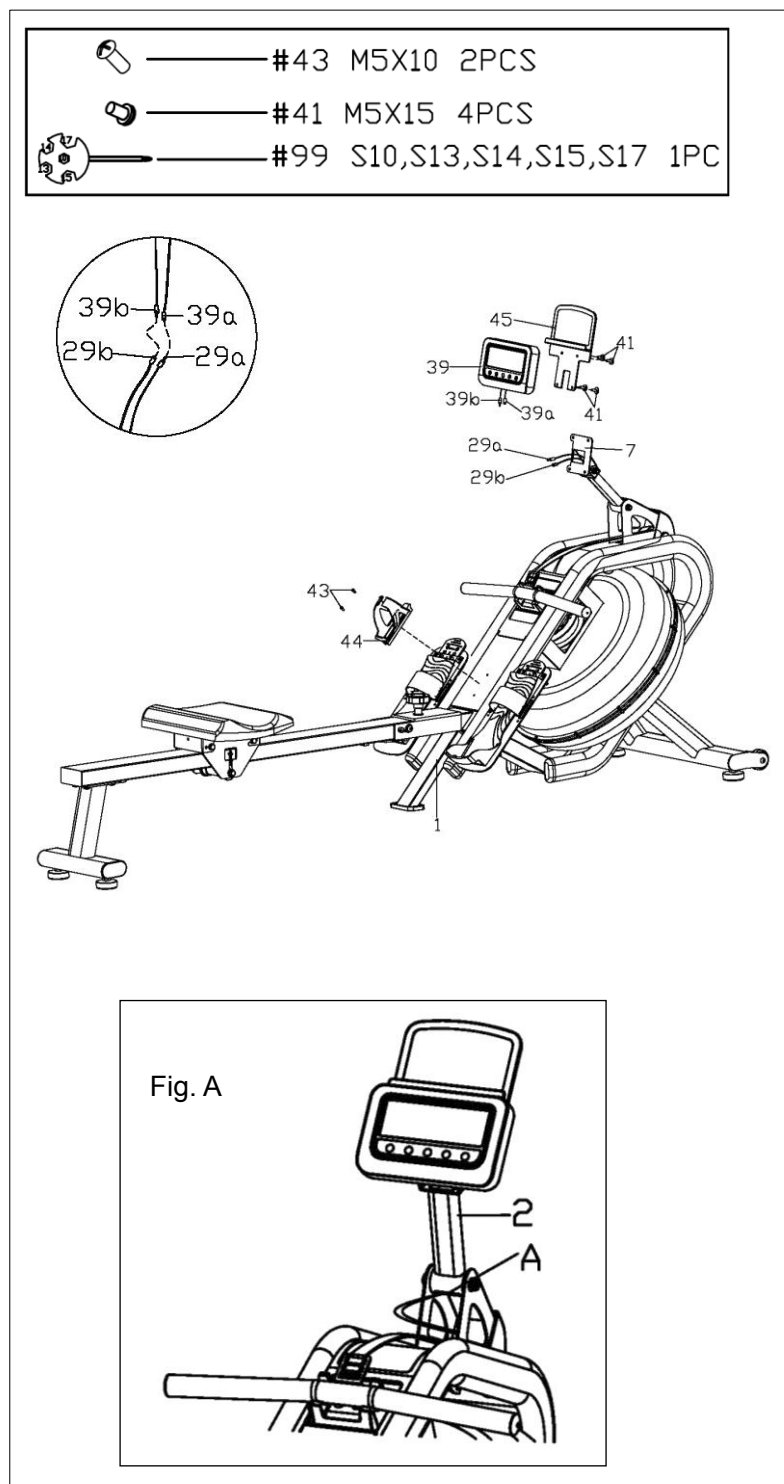

# HOW TO FILL AND EMPTY THE TANK

1. Remove the **Plug (No. 72)** from the **Upper Tank Cover (No. 73a)**.
2. To fill the tank with water, refer to Fig. A. Insert the **Funnel (No. 11)** into the tank, then use a bucket and **Pumping Siphon (No. 42)** to fill the tank. Use the water level gauge on the side of the tank to measure desired water level.
3. To empty the tank, refer to Fig. B. Place a bucket next to the rower and use the **Pumping Siphon (No. 42)** to pump the water out from the tank into the bucket.
4. Insert the **Plug (No. 72)** back into the **Upper Tank Cover (No. 73a)**. Wipe off excess water around the area.

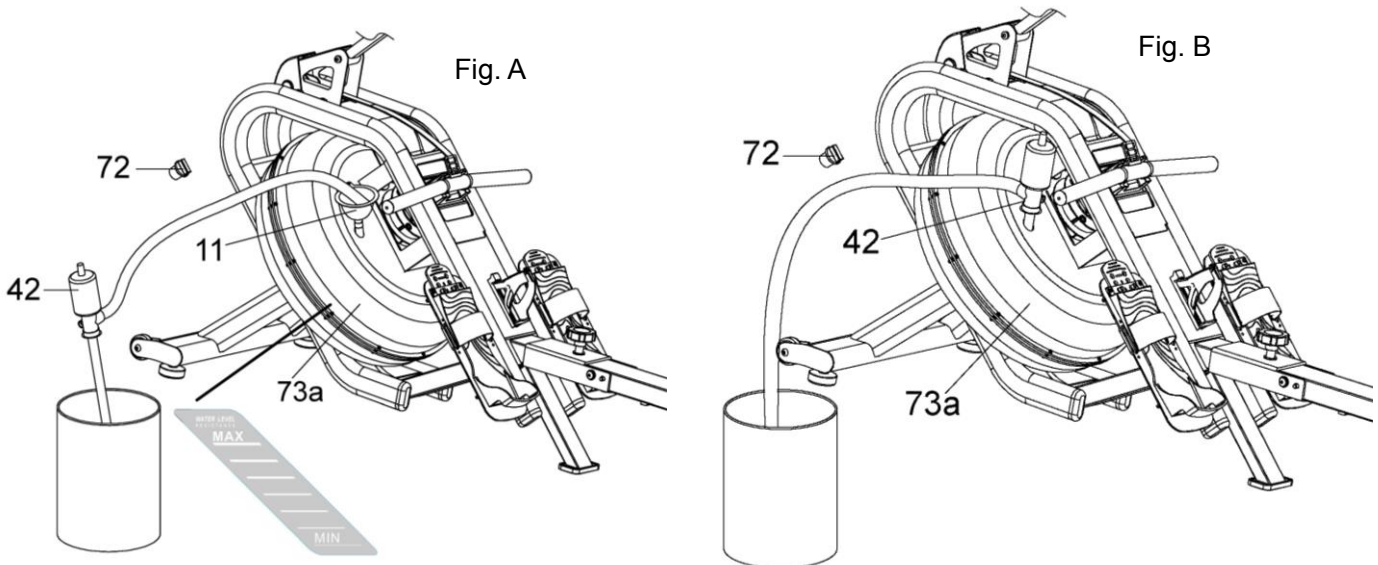


## **NOTE:**

- Fill the tank only with tap water. Add 1 water purification tablet (1 packet is included). Never use pool chlorine or chlorine bleach. This will damage the tank and void the warranty.
- Add a water purification tablet every 6 months or as needed. If the water remains cloudy, replace the water in the tank.
- Do not consume the tank water. Dispose of the water after pumping it out from the tank.

## **WATER LEVEL**

- The water level gauge is on the side of the tank. There is a max level. Never fill over this limit. Filling the tank over this limit will void the warranty.
- The resistance depends on the water level in the tank. The min level is the lowest resistance. The max level is the highest resistance.

# **BATTERY INSTALLATION & REPLACEMENT**

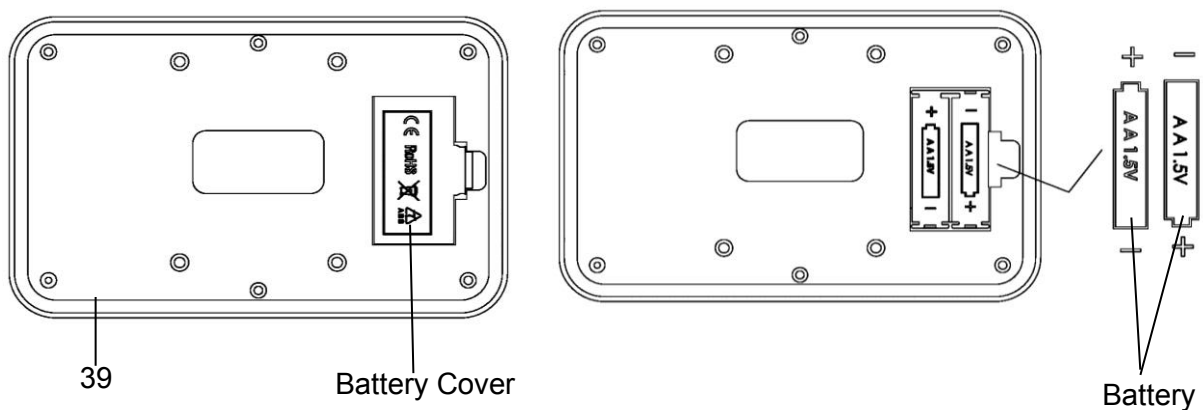

## **BATTERY INSTALLATION:**

1. Take out 2 AA batteries from meter box.
2. Press the buckle of battery cover on the back of the **Meter (No. 39)**, then remove battery cover.
3. Install 2 AA batteries into the battery case on the back of the **Meter (No. 39)**. Pay attention to the battery + and – poles before installing.
4. Press the buckle of battery cover, then put the battery cover back to the back of the **Meter (No. 39)**.

*The installation is complete!*




## **BATTERY REPLACEMENT:**

1. Press the buckle of battery cover on the back of the **Meter (No. 39)**, then remove battery cover.
2. Remove the 2 old AA batteries in the battery case and install 2 new AA batteries into the battery case on the back of the **Meter (No. 39)**. Pay attention to the battery + and – poles before installing.
3. Press the buckle of battery cover, then put the battery cover back to the back of the **Meter (No. 39)**.

*The replacement is complete!*


**NOTE:** Always change both batteries at the same time. Do not mix battery types and do not mix old and new batteries. Dispose batteries according to your state and regional guidelines.

# ADJUSTMENTS GUIDE

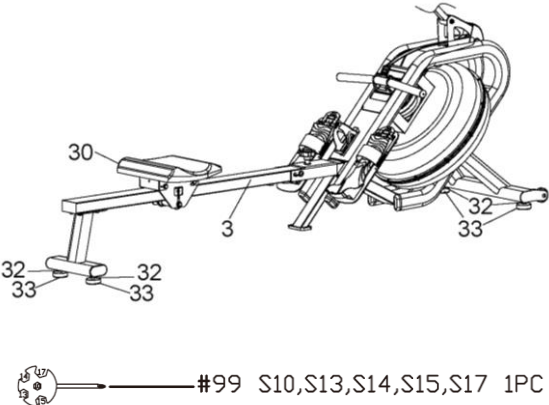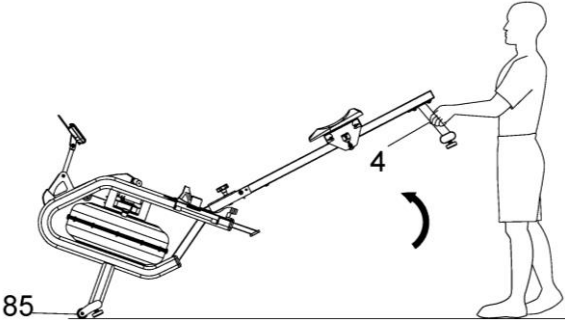
 <p>#99 S10,S13,S14,S15,S17 1PC</p>	<p><b>ADJUSTING THE BALANCE</b></p> <p>If the rower is unbalanced during use, adjust the <b>Hex Nuts (No. 32)</b> on the <b>Adjustable Foot Pads (No. 33)</b> of the rower using <b>Spanner (No. 99)</b>.</p> <p><b>CAUTION!</b> Moving parts, such as the <b>Seat (No. 30)</b>, can crush or cut. Keep hands clear of the <b>Slide Rail (No. 3)</b> during use!</p>
	<p><b>MOVING THE ROWER</b></p> <p>To move the rower, lift up the <b>Rear Support Tube (No. 4)</b> until the <b>Transportation Wheels (No. 85)</b> touch the ground. With the <b>Transportation Wheels (No. 85)</b> on the ground, you can transport the rower to the desired location with ease.</p>
	<p><b>PEDAL ADJUSTMENT</b></p> <p>The pedal strap is adjustable and can be personalized to fit the user's foot size.</p>

# FOLDING GUIDE

**CAUTION!**  
Move the **Seat (No. 30)** to the front of **Slide Rail (No. 3)** first or it will glide down when raising the rower up!

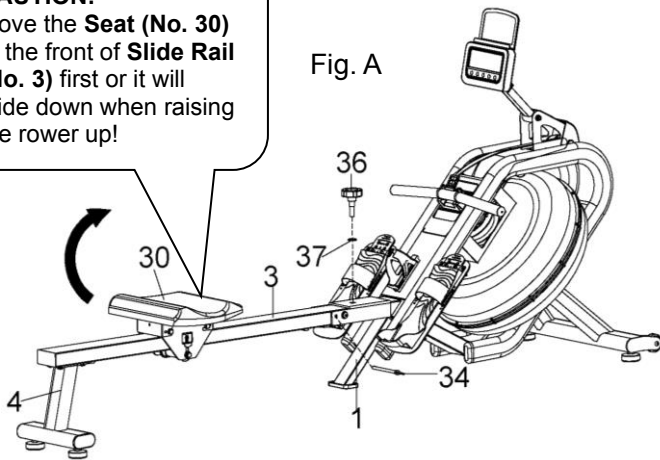

**CAUTION!**  
Move with caution when you raise the rower up, as your head may touch the **Rear Support Tube (No. 4)**.

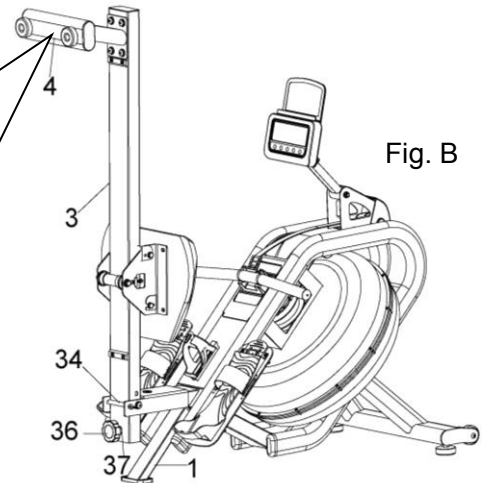

When not in use, you can save space by folding the **Slide Rail (No. 3)**.



Unscrew the **Knob (No. 36)** and **Flat Washer (No. 37)**, and remove the **Pull Pin (No. 34)** from **Main Frame (No. 1)** (Fig. A). Lower the **Seat (No. 30)** all the way down. Then fold the **Slide Rail (No. 3)** up.

**CAUTION:** The **Seat (No. 30)** will slide down when folding the **Slide Rail (No. 3)**.

Insert **Knob (No. 36)** and **Flat Washer (No. 37)** into the holes in the back of the **Slide Rail (No. 3)** and tighten. Then insert **Pull Pin (No. 34)** into the **Main Frame (No. 1)** (Fig. B).

If not using the rower for more than a month, empty the tank before storing.

# UNFOLDING GUIDE

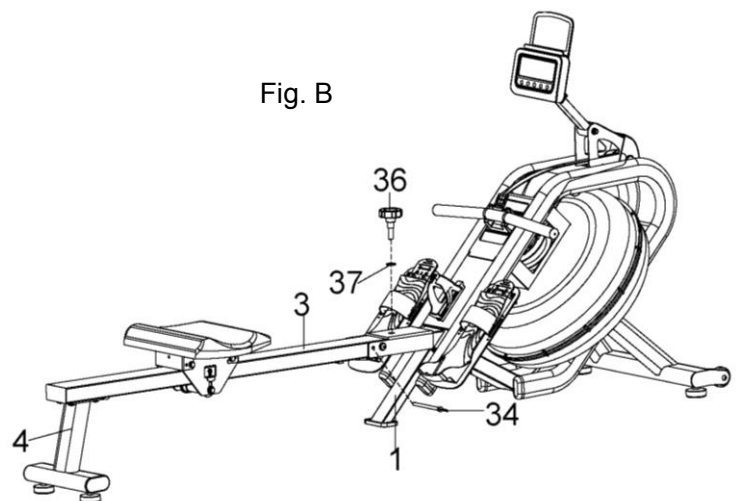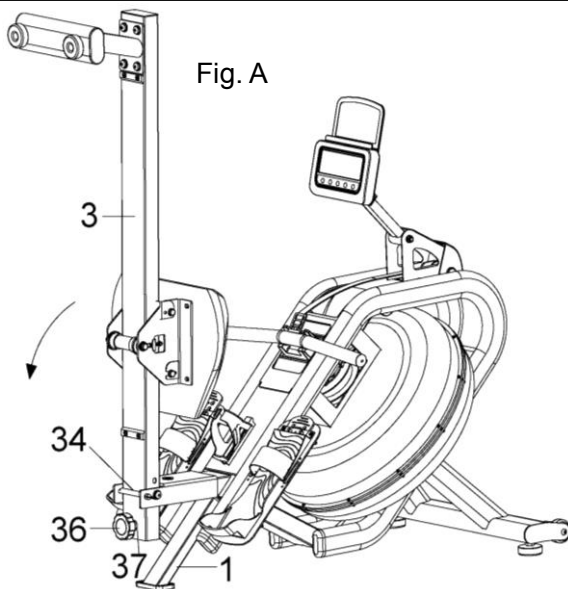


To unfold the **Slide Rail (No. 3)**, first remove **Knob (No. 36)** and **Flat Washer (No. 37)** from the **Slide Rail (No. 3)** and remove **Pull Pin (No. 34)** from **Main Frame (No. 1)**. (Fig. A)

Slowly fold down the **Slide Rail (No. 3)**, then screw **Knob (No. 36)** and **Flat Washer (No. 37)** into **Main Frame (No. 1)** and insert **Pull Pin (No. 34)** into **Main Frame (No. 1)**. (Fig. B)

**CAUTION:** When unfolding, please use one hand to hold the **Slide Rail (No. 3)** to avoid injury.


# EXERCISE METER

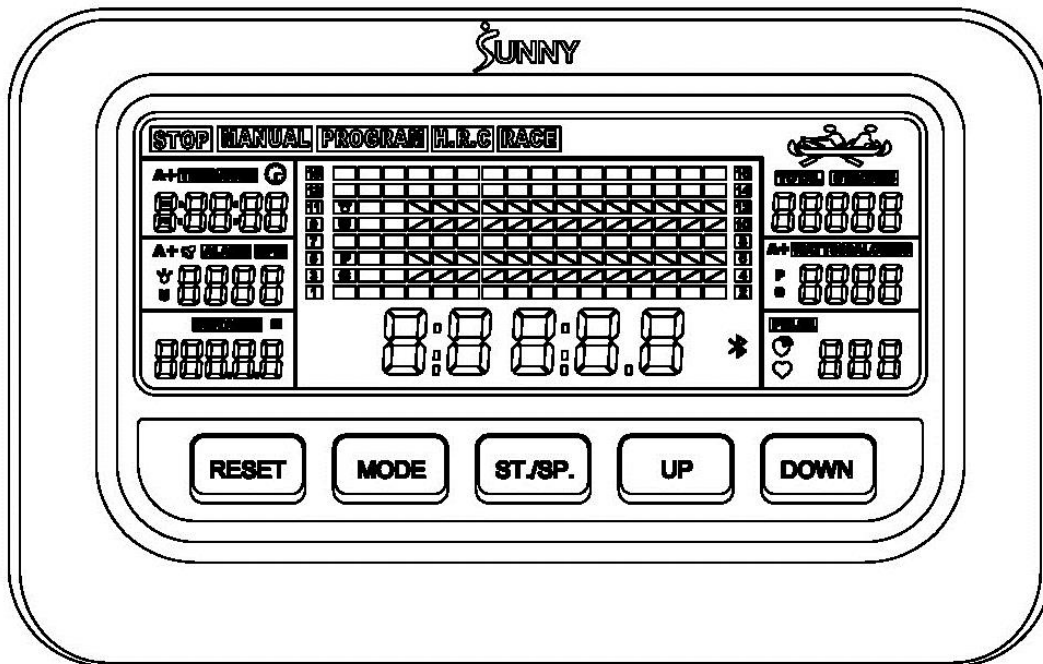

- TIME, TIME/500, SPM, DISTANCE, STROKES, TOTAL STROKES, CALORIES, WATT, PULSE.

## FUNCTION

- TIME: The total working time since starting exercise. Display range: 0:00:00 ~ 9:59:59 (H:M:S).
- TIME/500: The average time for 500 meters during exercise. Display range: 0:00 ~ 99:59 (M:S).
- SPM: Number of strokes per minute, indicating the stroke speed during exercise. Display range: 0 ~ 240.
- STROKES: The current count since starting exercise. Display range: 0 ~ 99999.
- DISTANCE: The current distance since starting exercise. Display range: 0 ~ 99999 meters.
- CALORIES: The current calories burned since starting exercise. Display range: 0 ~ 9999 Cal.
- TOTAL STROKES: The total strokes with all of the workout since starting exercise. If the batteries are replaced, the value resets to zero. Display range: 0 ~ 99999.
- WATTS: Display the user's exercise power.
- PULSE: Display the real time pulse, when the heart rate monitor is connected, the

wireless heart rate icon  is on.


## EXERCISE MODE

MANUAL	Standard exercise mode.
PROGRAM	TIME/DISTANCE/DISTANCE/STROKES countdown mode, and PULSE warning mode.
RACE	Race mode. User-defined PC difficulty (L1-L15), you can choose the distance to race: 500-10000 meters.

## KEY FUNCTION


UP	<ol style="list-style-type: none"> <li>1. Select exercise mode upwards.</li> <li>2. Increase the value during setting.</li> </ol>
DOWN	<ol style="list-style-type: none"> <li>1. Select exercise mode downwards.</li> <li>2. Decrease the value during setting.</li> </ol>
MODE	<ol style="list-style-type: none"> <li>1. During exercise, switch the display: TIME or TIME/500, STROKES or TOTAL STROKES, CALORIES or WATT.</li> <li>2. In PROGRAM mode or RACE mode, select and fix a function to set.</li> </ol>
RESET	<ol style="list-style-type: none"> <li>1. Return to the initial interface in stop state.</li> <li>2. Reset the setting values to 0 when Bluetooth is not connected.</li> <li>3. Press and hold the key for 2 seconds to clear all the function values except TOTAL STROKES when Bluetooth is not connected.</li> <li>4. Press and hold the key for 6 seconds to disconnect from both the SunnyFit APP and the heart rate monitor; then, the meter will enter sleep mode.</li> </ol>
ST./SP. (START/STOP)	<ol style="list-style-type: none"> <li>1. Enter the exercise mode.</li> <li>2. Start or stop exercise.</li> </ol>

## MANUAL MODE

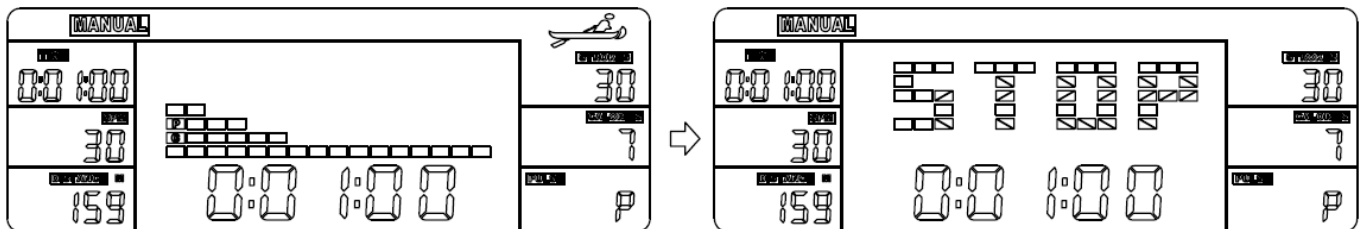

- Press UP or Down key to select and lock onto “MANUAL”.
- Press ST./SP. key to start exercise.
- Press UP or DOWN key to select a particular function value to display in main window.
- Press MODE key to select and fix a function to display: TIME, STROKES, CALORIES or TIME/500, TOTAL STROKES, WATT.
- When in stop state, press ST./SP. key to restart; when in exercise state; press the ST./SP. key to stop.
- Press RESET key to return to the initial interface in stop state.

## PROGRAM MODE

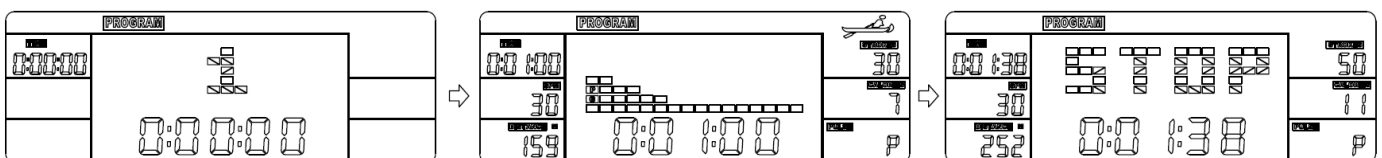


- Press UP or Down key to select and lock onto “PROGRAM”.
- Press ST./SP. key to set the mode.
- Press MODE key to select a function to set: TIME→DISTANCE→STROKES →CALORIES→PULSE.
- Press UP or DOWN keys to increase or decrease the setting value. Press RESET key to reset the setting value to 0.

- Press ST./SP. key to start exercise.
- Press UP or DOWN key to select a particular function value to display in main window.
- Press MODE key to select and fix a function to display: TIME or TIME/500, STROKES or TOTAL STROKES, CALORIES or WATT.
- If any function is set, at exercise state, this function is displayed as a countdown (except PULSE). When the countdown reaches 0, the exercise will automatically stop with a "DI DI" sound prompt.
- If PULSE value is set, at exercise state, when your pulse value surpasses the target value, the exercise will automatically stop with a "DI DI" sound prompt.
- When in stop state, press ST./SP. key to restart; when in exercise state; press the ST./SP. key to stop.
- Press RESET key to return to the initial interface in stop state.

**NOTE:** If more than one function value is set, only the last function value is valid.

## RACE MODE

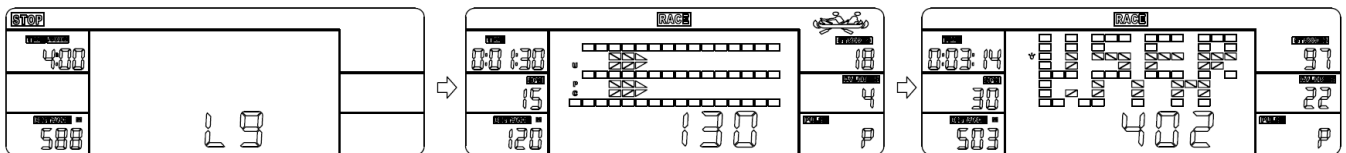

- Press UP or Down key to select and lock onto "RACE".
- Press ST./SP. key to set the mode.
- Press MODE key to select the function to set: TIME/500 or DISTANCE.
- Press UP or DOWN key to increase or decrease the setting value.
- PC level of difficulty is L1-L15. At higher difficulty, the PC will finish the race faster.
- Press ST./SP. key to start exercise.
- The one who finishes the race first is the winner.
- When in stop state, press ST./SP. key to restart; when in exercise state; press the ST./SP. key to stop.
- Press RESET key to return to the initial interface in stop state.

## ■ SLEEP MODE

- The system turns off automatically and disconnects the heart rate monitor if the sensor has no signal input, or no key are pressed for approximately 4 minutes when Bluetooth is not connected.
- The system turns on when any key is pressed or there is a signal input.

## BLUETOOTH

1. The Bluetooth icon will flash when the meter is on or wakes from sleep mode. If no Bluetooth connection is established within 3 minutes, the Bluetooth icon will turn off.
2. The Bluetooth icon will stay on when it is connected.

## WIRELESS HEART RATE

1. The wireless heart rate icon will flash when the meter is on. If the heart rate monitor is not connected within 1 minute, the wireless heart rate icon will turn off.
2. After exercise resumes, the wireless heart rate icon will flash. If the heart rate monitor is not connected within 1 minute, the wireless heart rate icon will turn off.

3. When the meter wakes from sleep mode, the wireless heart rate icon will flash. If the heart rate monitor is not connected within 1 minute, the wireless heart rate icon will turn off.
4. The wireless heart rate icon will flash when the MODE key is pressed. If the heart rate monitor is not connected within 1 minute, the wireless heart rate icon will turn off.
5. The wireless heart rate icon will stay on when the heart rate monitor is connected.

**NOTE:** The heart rate monitor is not included. Wireless heart rate function works with SunnyFit Heart Rate Monitor HR200. HR200 can only connect to the meter when the wireless heart rate icon is flashing.

## BATTERY

This meter uses 2 AA batteries, which are included. Changing the batteries will reset all values. If there is a problem with the display, try to change the batteries first. When changing the batteries, change both at the same time. Do not mix battery types. Do not mix old and new batteries. Dispose of old batteries according to your regional guidelines.

## TECHNICAL DATA

**Connectivity:** Bluetooth LE

**Frequency Range:** 2400~2483.5 Mhz

**Transmitting Power:** 0 dBm

## APP CONNECTION:

Connect Smart Equipment to SunnyFit App:

1. Scan to download SunnyFit from the app store:



2. Ensure that the Bluetooth function is turned on from your mobile device.
3. If this is your first time using the SunnyFit app, follow the in-app instructions to register for your free SunnyFit account and log in.
4. Begin any workout activity that matches your smart equipment, then follow the onscreen prompts to search for and connect to your smart equipment.
5. When connected, your stats and records will be displayed at the end of your course/session and recorded in your account profile!


Troubleshooting:

- If you are having trouble connecting your smart equipment, visit [www.sunnyfit.com/guide](http://www.sunnyfit.com/guide) or scan the QR code below:




- If you require additional support, please contact [support@sunnyfit.com](mailto:support@sunnyfit.com).

# EXPLODED DIAGRAM 1

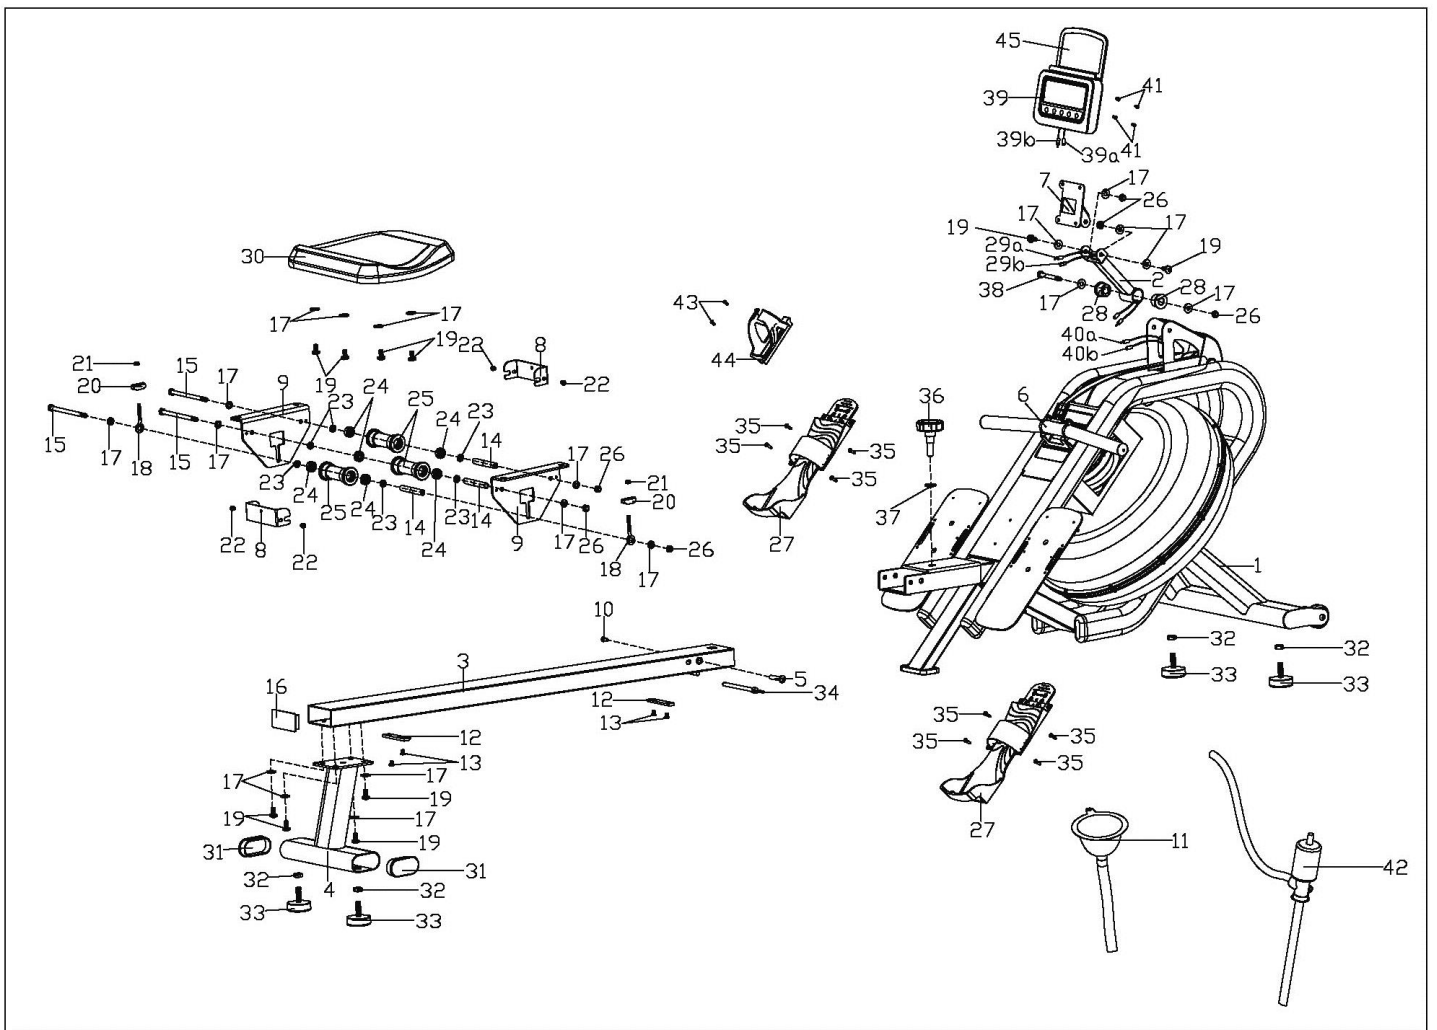

# EXPLODED DIAGRAM 2

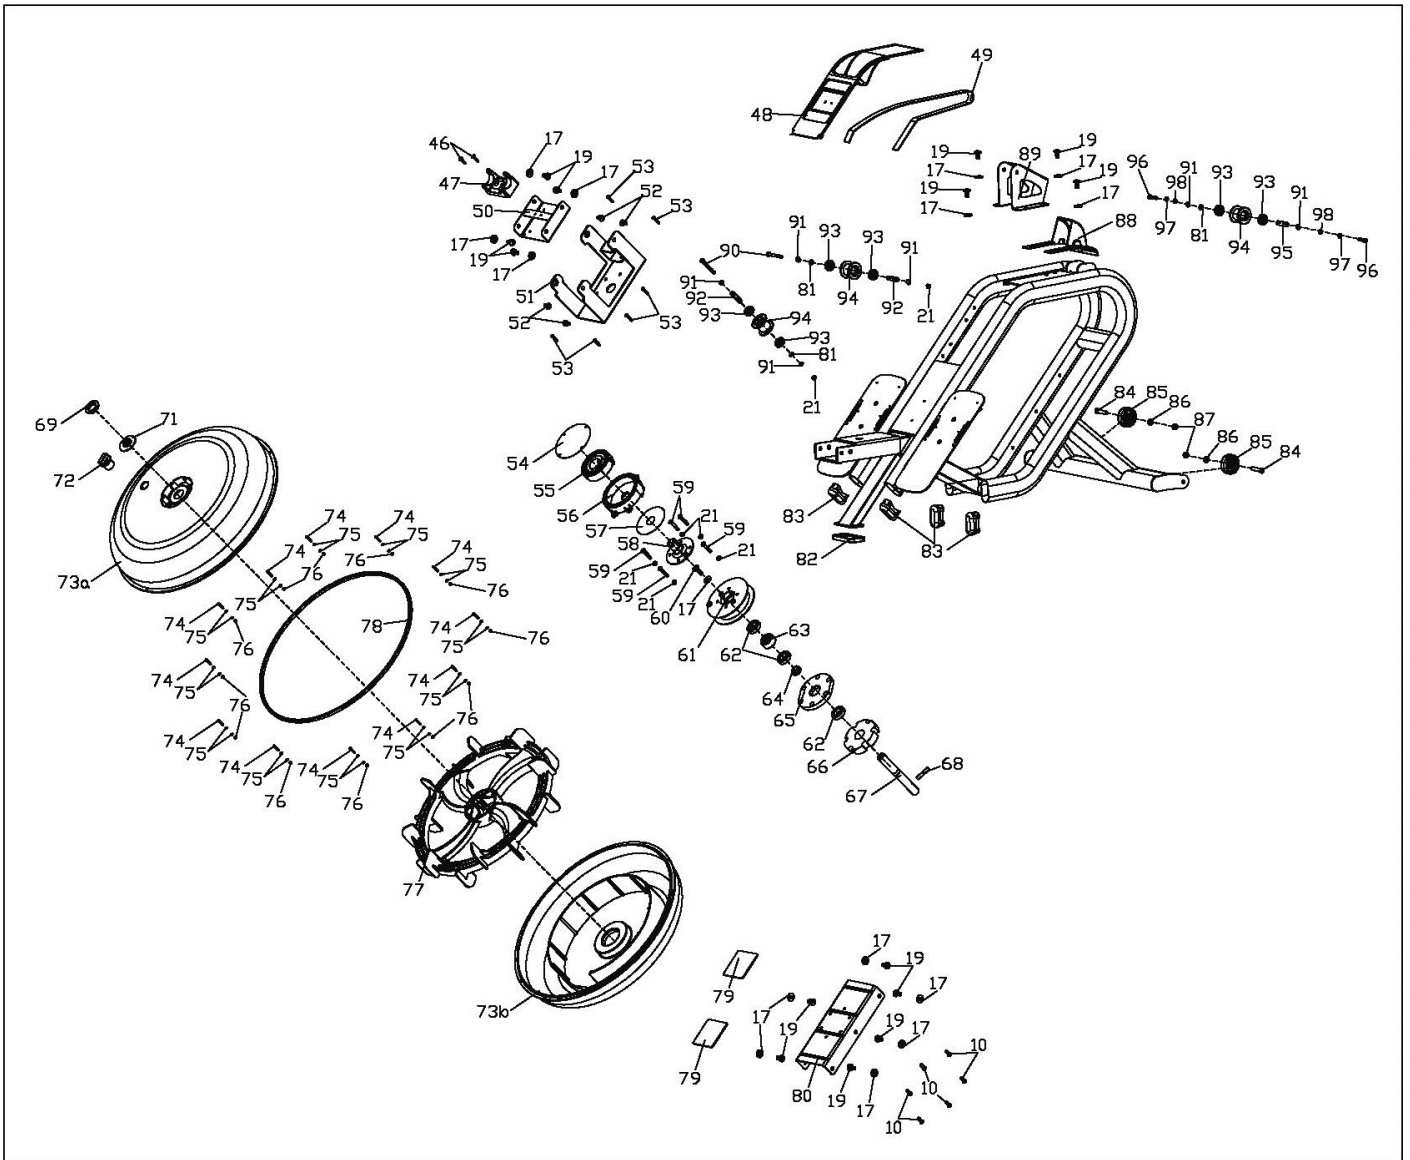

# PARTS LIST

No.	Description	Spec.	Qty.
1	Main Frame		1
2	Meter Support Tube		1
3	Slide Rail		1
4	Rear Support Tube		1
5	Bolt	Φ10XL94.5	1
6	Pull Bar		1
7	Meter Plate		1
8	U Shape Baffle		2
9	Supporting Board		2
10	Bolt	M6XL15	7
11	Funnel		1
12	Limit Cushion	75X18X5	2
13	Screw	M6X10	4
14	Spacer	Φ13XΦ8X78	3
15	Hex Bolt	M8X125	3
16	Square Cap	80X40X2.0	1
17	Flat Washer	D8XD20X1.5	35
18	Adjustable Chain Bolt	M6X50	2
19	Screw	M8X16	24
20	Adjustable Chain U Mat	3X30X20	2
21	Nylon Nut	M6	9
22	Screw	M5X7	4
23	Roller Spacer	Φ15X3.5X4	6
24	Bearing	608Z	6
25	Roller	Φ40X92	3
26	Nylon Nut	M8	6
27	Pedal		2
28	Plastic Bushing	Φ32X13.3	2
29a	Extension Wire A	350mm	1
29b	Extension Wire B	350mm	1
30	Seat		1
31	Oval Cap	80X40x2	2
32	Hex Nut	M10	4
33	Adjustable Foot Pad	Φ52X19	4
34	Pull Pin	Φ8XL105XA100	1
35	Screw	M4X5	8
36	Knob	M12X30XΦ1	1
37	Flat Washer	D12XΦ24X2.0	1
38	Bolt	M8X70	1
39	Meter	HT-109	1
39a	Meter Wire A	100mm	1
39b	Meter Wire B	100mm	1
40a	Sensor Wire A	500mm	1
40b	Sensor Wire B	500mm	1
41	Screw	M5X15	4
42	Pumping Siphon		1

No.	Description	Spec.	Qty.
43	Screw	M5X10	2
44	Bottle Holder		1
45	Tablet Holder		1
46	Screw	M5X15	2
47	Handlebar Holder		1
48	Protective Cover		1
49	Mesh Belt	t1.5X22X3000	1
50	Board		1
51	Fixed Plate		1
52	Screw	M8X15	4
53	Screw	ST4.2X16	6
54	PC Board 3	Φ112X0.5	1
55	Volute Spring	t0.5X22X5080	1
56	Volute Wheel	Φ115X110X34.5	1
57	PC Board 2	Φ90XΦ25.2X0.5	1
58	Volute Spring Axle	Φ85X42.5	1
59	Screw	M6X35	5
60	Screw	M8X25	1
61	Belt Wheel	Φ130X34.8	1
62	Bearing	6904-2Z	3
63	Bearing	Φ37XΦ20XT18	1
64	Spacer	Φ25XΦ20.1X8	1
65	Fixed Plate	Φ110X12	1
66	Raw Cotton		1
67	Rotating Axle	Φ20X163Xm8	1
68	Stainless Steel Pin	Φ8X40	1
69	Small Seal Ring	Small size	1
70	N/A		-
71	Seal Ring	Medium size	1
72	Plug	Φ35XΦ15X3	1
73a	Upper Tank Cover		1
73b	Bottom Tank Cover		1
74	Screw	M3X20	12
75	Flat Washer	D3.5XΦ7X0.5	24
76	Nylon Nut	M3	12
77	Impeller	463X124	1
78	Seal Ring	Large size	1
79	Silicone Cushion	80X80X3.0	2
80	Supporting Board		1
81	Wave Washer	D10XΦ15X0.3	3
82	Rubber Foot Pad		1
83	Oblate Plug		4
84	Bolt	M8X38	2
85	Transportation Wheel	Φ50XΦ8XL21	2
86	Flat Washer	D8XΦ16X1.5	2
87	Nylon Nut	M8XH6.5	2

No.	Description	Spec.	Qty.
88	Protective Cover		1
89	Fixed Plate		1
90	Hex Bolt	M6X55	2
91	Axle Washer	D10	6
92	Belt Wheel Axle	Φ10X40XΦ6.1	2
93	Bearing	6000	6
94	Belt Roller	Φ45X35	3

No.	Description	Spec.	Qty.
95	Belt Wheel Axle		1
96	Hex Bolt	M6X15	2
97	Spring Washer	D6	2
98	Flat Washer	D6	2
99	Spanner	S10,S13,S14,S15, S17	1
100	Allen Wrench	S5	1
101	Allen Wrench	S6	1

**CONNECT**  
With us

## DOWNLOAD

Track your fitness progress & join  
**FREE** workout courses!

Download  **SUNNYFIT** today!




---

## FOLLOW

Find us on social media @sunnyhealthfitness

 @sunnyhealthfitness

 @sunnyhealthandfitness

 @sunnyhealthfit

 /sunnyhealthfitness

 /sunnyhealthfitness

 /sunnyhealthandfitness

[www.sunnyhealthfitness.com](http://www.sunnyhealthfitness.com)